

Default Quench Configuration  
Series 804 and 808

Run Parameters			Configuration			Terminals	
Parameter	Default	Changes	Parameter	Default	Changes		
OP	0.0		P1	cALc		Terminals 1A&1B	
Unit	°F		P2	nnnn		Out1	Heat
SPLo	0		P3	-328			
SPHi	300		P4	2502		Terminals 2A&2B	
SP1	185		P7	NONE		Out2	Cool
SP2	0		P11	AL1			
SPSL	SP1		P12	AL2			
SPrr	oFF		P13	NONE			
AL1	8		P14	NONE			
AL1H	1		P15	4.20			
AL2	8		P21	dLo			
AL2H	0		P22	NONE			
oFS	0		P23	no			
F,LT	16		P24	dHi			
oPLo	0.0		P25	NONE			
oPHi	0.0		P26	no			
LdA	0		P27	NONE			
LEA	0		P31	NONE			
LdAL	oFF		P32	100.0			
LEAL	oFF		P33	NONE			
HcAL	oFF		P34	oFF			
UcAL	1 dLE		P35	on			
			P36	0.0			
			P37	NONE			
			P41	NONE			
			P51	NONE			
			P52	NONE			
			P61	1			
			P62	19.20			
			P63	NONE			
			P64	NONE			
			P71	A-n			
			P72	tSt			
			P73	ALAL			
			P74	Std			
			P75	oP			
			P76	2			
			P77	4			
			P81	NONE			
			rEcS	NONE			
			rEcL	NONE			
			PHAS	NONE			