

Default Heat Output Configuration
Series 816

Run Parameters			Configuration			Terminals	
Parameter	Default	Changes	Parameter	Default	Changes		
OP	0.0		P1	cALc		Terminals 1A&1B	
A-N	AUTO		P2	nnnn		Out1	Heat(relay)
tSt	rES		P3	-328			
Unit	°F		P4	2502		Terminals 2A&2B	
SPLo	0		P7	HP		Out2	Not assigned
SPHi	2500		P11	HEAL			
SP1	0		P12	NONE		Terminals 4B&4A	
SP2	0		P14	AL2J		Out4	Alr2
SPSL	SP1		P21	NONE			
SPrr	oFF		P24	Lo			
AL2	1400		P25	NONE			
AL2H	1		P26	no			
ALUn	oFF		P27	NONE			
Pb	20		P28	n/ A			
t _i	360		P29	n/ A			
t _d	oFF		P31	NONE			
cbLo	AUTO		P32	100.0			
cbHi	AUTO		P33	NONE			
Pr	0.0		P34	oFF			
IPHS	5.0		P35	on			
oFS	0		P36	0.0			
F ₁ Lt	1.6		P37	AL2			
oPLo	0.0		P41	dLL			
oPHi	100.0		P42	Hour			
LdA	0		P43	dLL			
LEA	0		P51	Err5			
LdAL	oFF		P61	1			
LEAL	oFF		P62	19.20			
HcAL	oFF		P63	NONE			
t _{dUr}	1.00		P64	NONE			
t _{tHr}	oFF		P73	ALAL			
t _{EL}	0.00		P74	Std			
t _{rE}	1.00		P76	2			
UcAL	1 dLE		P77	4			
			P81	NONE			
			rEcS	NONE			
			rEcL	NONE			
			PHAS	NONE			