

Setup Sheet - Default Configuration
Series 816L

Run Parameters			Configuration			Terminals	
Parameter	Default	Changes	Parameter	Default	Changes		
Unit	°F		P1	cALc		Terminals 1A&1B	
AL2	1800		P2	nnnn		Out1	Not assigned
AL2H	1		P3	-328			
oFS	0		P4	2502		Terminals 2A&2B	
F, Lt	16		P11	NONE		Out2	Not assigned
UcAL	Idle		P12	NONE			
			P14	AL21		Terminals 4B&4A	
			P21	NONE		Out4	Alr2 (High Limit)
			P24	HI			
			P25	mAN			
			P26	no			
			P27	NONE			
			P35	LAL			
			P37	AL2			
			P51	NONE			
			P61	1			
			P62	19.20			
			P63	NONE			
			P64	NONE			
			P73	ACAL			
			P74	AL2			
			P76	2			
P77	4						
rEc.S	NONE						
rEc.L	NONE						
PHAS	NONE						

Super Systems Inc. Setup Sheet for Series 816L
(Document #4631; Rev C: 2/4/2021; MCO #2307).
Visit us online at <http://www.supersystems.com>.