

Setup Sheet
Series 804L & 808L

Run Parameters			Configuration			Terminals	
Parameter	Default	Changes	Parameter	Default	Changes		
Unit	°F		P1	cALc		Terminals 1A&1B	
AL2	1800		P2	nnnn		Out1	Not assigned
AL2H	1		P3	-328			
oFS	0		P4	2502		Terminals 2A&2B	
F, Lt	16		P11	none		Out2	Not assigned
UcAL	1 dLE		P12	none			
			P13	none		Terminals 3A&3B	
			P14	AL2J		Out3	Not assigned
			P21	none			
			P24	HI		Terminals 4B&4A	
			P25	mAn		Out4	Alr2 (High Limit)
			P26	no			
			P27	none			
			P35	LAL			
			P37	AL2			
			P51	none			
			P52	none			
			P61	1			
			P62	19.2			
			P63	none			
			P64	none			
			P71	ACAL			
			P72	ACAL			
			P73	ACAL			
			P74	AL2			
			P75	none			
P76	2						
P77	4						
rEc.S	none						
rEc.L	none						
PHAS	none						

Super Systems Inc. Setup Sheet for Series 804L/808L.
(Document #4643; Rev A: 2/4/2021; MCO #2307).
Visit us online at <http://www.supersystems.com>.